

## **Space-Arm Clamp**

BNESP

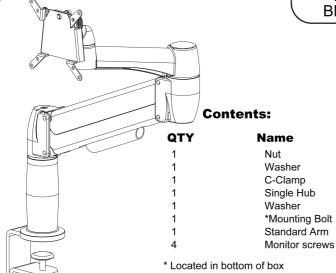



Required Tools: 6mm Allen wrench 17mm Deep socket



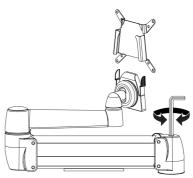

Position Arm so it is parallel to desk surface. Turn bolt wise for lighter monitors.

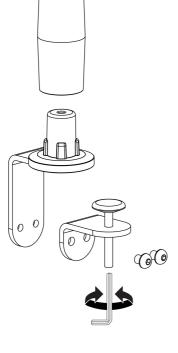

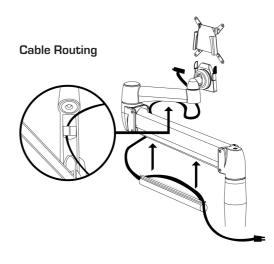

Sign up for our newsletter and get the latest trends and innovation news

www.bakkerelkhuizen.com